


AURES[®]

V3A4-AV

Lecteur de cartes magnétiques

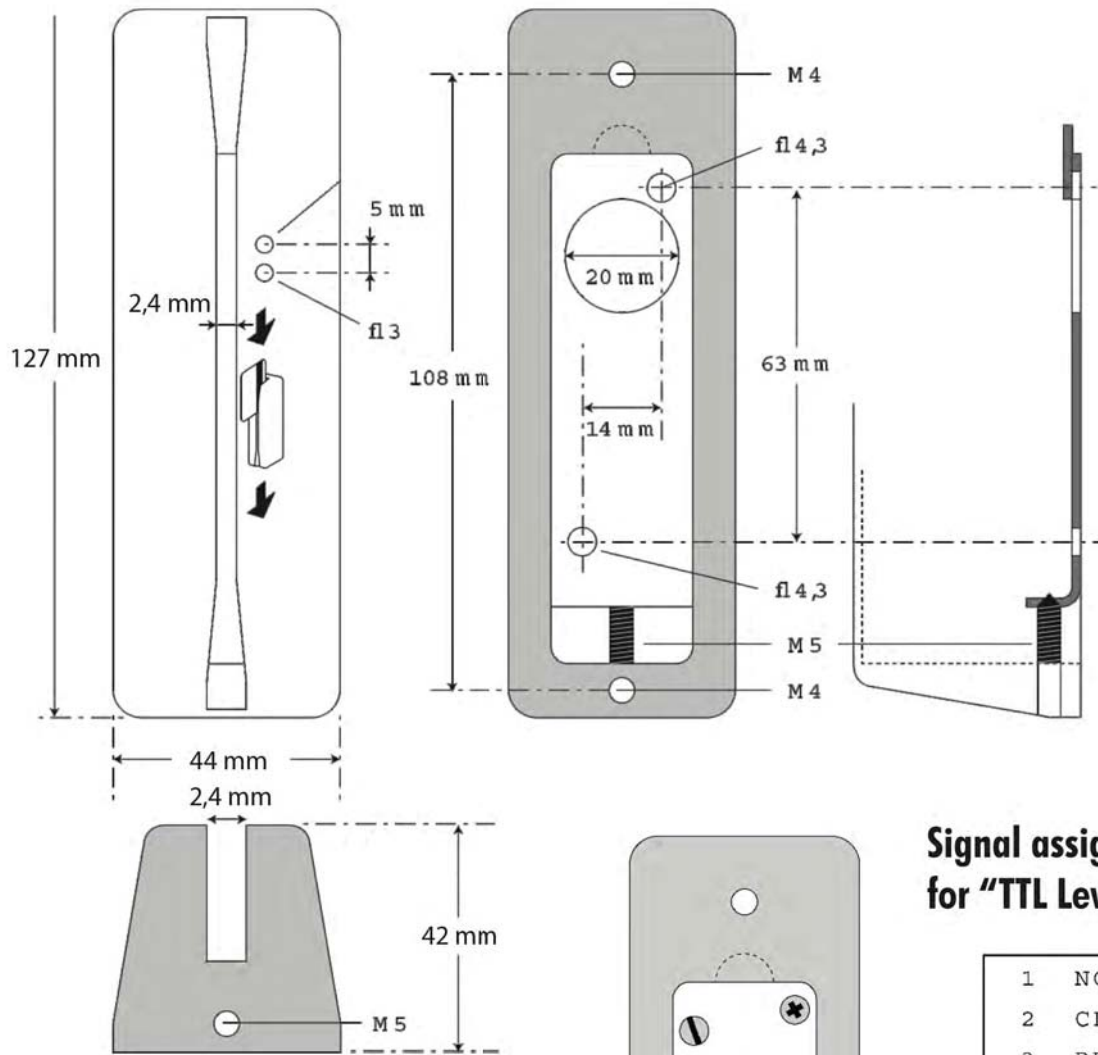

Signal assignment for "TTL Level" interface

1	NC
2	CLS
3	RDP
4	RCP
5	+5V
6	GND
7	BUZZER
8	BUZZER
9	LED RED -
10	LED RED +
11	LED GREEN -
12	LED GREEN +

